 




EST 1986

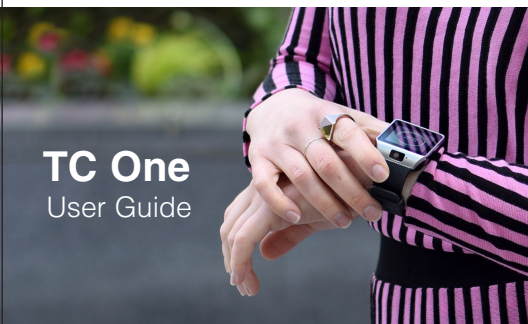

 
TC One User Guide

App not compatible with Apple iOS devices.
Not water resistant.

CHARGING THE BATTERY

The watch should be charged for at least 2 hours before use.

WATCH DETAILS

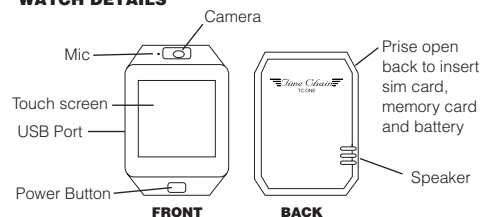

The **TC One** takes a memory card.
To install the memory card, slide into slot A.

The **TC One** can be used with a SIM card or connected to a smartphone. To install the SIM card, slide slot B in the direction of the arrows (Up), then lift to unlock and open the SIM card holder. Insert the SIM and return the SIM card holder to its original position.



WEARING YOUR WATCH

Ensure you wear the **TC One** in the correct direction, the power button should be located below the screen nearest to the body, and the camera above the screen.

Power button: Power On/Off. Long press for ON/OFF and short press to EXIT from menu to clock. Short press at clock display to light on or off the display.

USB: Charging/Data;

Touchscreen: All the functions can be complete by sliding or clicking on the capacitive touch screen.

OPERATING THE TOUCH SCREEN

- Turn on, use your finger to work the touch screen:
- Slide from right to left to enter next page of menu.
 - Click icon on menu to enter sub-menu.
 - Slide from top to bottom to return to main menu.

CHANGING THE CLOCK DISPLAY

On the clock screen, click the center of the clock to change the clock face, there are 3 different style faces available

DOWNLOADING THE SMARTPHONE APP

Scan the QR code below to download the app on your android phone. This app is used to sync your phone to your smart watch.

Android 5.0 above, please install **Mediatek SmartDevice** application:



Android 2.3.3 to 4.4, please install **Smile Notification** application:



These can also be downloaded at Google Play Store.

BLUETOOTH

To use the app, turn on Bluetooth on your phone.

When the app is installed make your phone discoverable in the Bluetooth settings.

Connecting from your phone

Search for devices and pair with 'smart watch'.

Connecting from your watch

On your **TC One** smartwatch Select BT Dialer

>Search new device

Find your phone

>Pair

Once connected, your watch will send a request to your device to allow syncing with your phonebook and call history.

Accept this request to allow full synchronizing of the phone book and call history, if this is not accepted it can affect usability of these functions.

BASIC FUNCTIONS

Message Sync phone/watch to send/receive messages.

Calls Sync call history from smartphone, including missed calls, dialled calls, received calls and all calls.

Bluetooth Set Bluetooth on and off.

BT Dialer Bluetooth connect from watch to smartphone.

Remote Notifier Sync messages from smartphone: Twitter, Facebook, etc.

Remote Capture Controlled by the **TC One** watch, use your smartphone camera to take photos. To use this function your need to turn on the smartphone camera.

Anti lost Find your watch or phone with via its synced device. Two-way anti-lost.

Audio Player Play music both on the **TC One** smart watch and on the synchronized smartphone (connected by Bluetooth). The audio player on should be activated first for some smartphones.

Pedometer Pedometer is designed for those who want to track their steps. For a more accurate reading of steps, swing your arms when walking. In the pedometer function, slide left to show steps, calories, speed, distance etc. The pedometer will track the steps while the watch is not being used however it will not track steps when the watch is turned off.

Sleep Monitor Keep a record of of deep sleep and light sleep to know your quality of sleep.

Rest Designed for those that spend most of their day stationary, a reminder can be set to remind wearer to keep active.

APK Scan the QR code via your android smart phone, to download the synchronizing software.

Alarm Set an alarm for a desired time.

Calculator Perform calculations

Calendar Keep track of the date and set event dates.

Image Viewer View saved images

User Profiles General, Silent, Meeting, Outdoor

File Manager See files on memory card

Settings language, display, password, etc.

Camera Take photos

NOTES

- The **TC One** is not water resistant.
- Please charge fully before use, charging time needed: 1-2 hours.
- Please use the cable supplied with the watch. Charger for android smartphone can also be used.
- When using Bluetooth it may disconnect occasionally, if so, please reconnect following the steps above.
- Some smartphones will show the name of the song in audio player, but some will not. This is normal.

TROUBLE SHOOTING

Unable to power on Press the power button for at least 3 seconds to turn on. If the watch still does not turn on, connect to charger.

Short usage time /sudden shut down Watch may not be charged fully. Recharge to full battery to extend usage time. If SIM card is installed this will affect battery life if signal is poor.

Unable to hear when using the phone When making a call via BT dialer the watch may be too far from the connected smartphone or something is obstructing the signal. Keep the connected smartphone in close range.