

BINARY INSTRUCTIONS

SETTING THE DATE

Press button A while time is displayed to enter Date mode.
Press and hold button B to activate setting mode.
Date will appear on the screen, date flashing
Press button A to change as desired.
Press button B to confirm.
Month will start to flash.
Press button A to advance through the months.
Press button B to confirm and exit setting mode.



STORM


LONDON

BINARY

FRONT

FEATURES

Dynamic animation display
Auto-turn off function
Time display
Date display
12 or 24H format

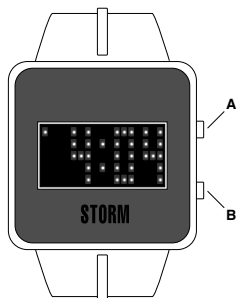

SEQUENCE

Press A once to view Time display
Press A once while Time is displayed to view Date display.

IMPORTANT INFORMATION

The battery life will vary due to the amount it is used.
This watch is not water resistant.
Please avoid contact with water/steam/humid environments.

SETTING THE TIME

Press button A once to enter Time mode.
Press and hold button B to activate setting mode.
12 H or 24 H will appear on the screen flashing.
Press button A to change as desired.
Press button B to confirm.
Time will appear on the screen, hours flashing.
Press button A to advance through the hours.
Press button B to confirm.
Minutes will start to flash.
Press button A to advance through the minutes.
Press button B to confirm and exit setting mode.

NB

When setting the hour in 12H mode a dot will appear in the top left hand corner of the screen to indicate PM.

BACK