 
 


This watch features an easy open case back for DIY battery changing. Use a coin placed in the slot on the case back and turn in the direction indicated to either Open/Close. Please make sure the case back is closed securely.

Battery type: CR2032 (3V)

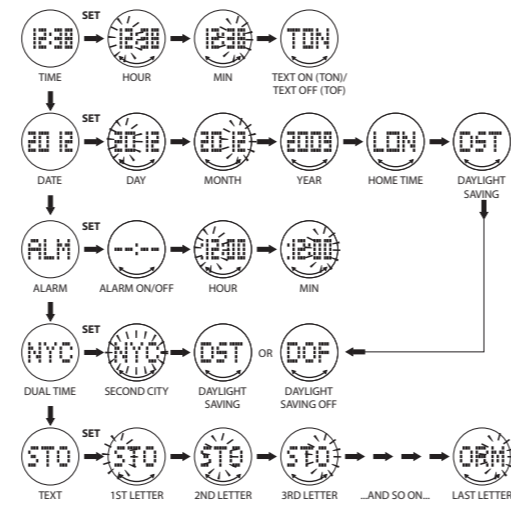

Press button B or touch screen to scroll main menu

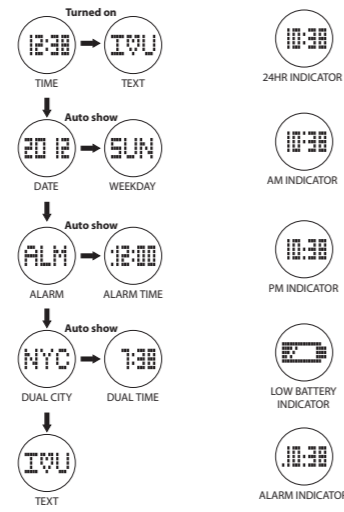

### NOTES

Touch screen sensor will cease to work and should not be used while in contact with water. Water or grease on the watch surface will effect the function of the touch screen sensor. Please wipe screen before use.

**When the low battery indicator is displayed:** Touch screen function will be disabled. Text function will be turned off. Button B will become the character scroll button instead of touch screen adjustment. Button A will become the confirm/advance button.

**To change settings in low battery mode** When entering setting mode by pressing button A, Press button B to sole Characters. Press button A to confirm and move to the next item.

### MORE NOTES

Press Button B to activate module, time will be displayed. The touch screen feature (TSF) will now be enabled, to allow menu scrolling and setting adjustment. The TSF will automatically switch off when left idle for over one minute.

Recommended time for displaying LED should not exceed one minute. The low battery signal will be displayed as a warning, even when battery is full, if LED/TSF is continuously used for a long period. The low battery signal will disappear after the LED is left idle for a few hours.


Watch functions best between temps. 10°C-40°C

Battery life will depend on the usage. Change battery as soon as possible when LOW battery indicator is always on.



TOUCH SCREEN

### FEATURES AND FUNCTIONS

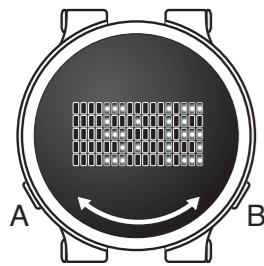

- TIME DISPLAY with AM/PM indicator
- DATE and DAY DISPLAY with Auto calendar
- ALARM
- WORLD TIME ZONE (27 cities)
- TEXT DISPLAY (up to 10 characters)
- LOW BATTERY INDICATOR

### SETTING THE TIME

Press button 'B' once to view the TIME  
Press button 'A' to enter setting mode.  
HOUR digit will flash.



Rotate finger around the outer edge of the screen to adjust digit up or down.

Press button 'B' to enter MINUTES



Rotate finger around the outer edge of the screen to adjust digit up or down.

Press button 'B' to enter TEXT ON/OFF mode  
Rotate finger around the outer edge of the screen to turn ON (TON) or OFF (TOF)  
Press button 'B' to exit

### SETTING THE DATE

Press button 'B' twice to view the CALENDAR  
Press button 'A' to enter setting mode.  
MONTH digit will flash.



Rotate finger around the outer edge of the screen to adjust digit up or down.

Press button 'B' to enter DATE



Rotate finger around the outer edge of the screen to adjust digit up or down.

Press button 'B' to enter YEAR, CITY, and Daylight saving time DST.  
Rotate finger around the outer edge of the screen to turn ON (DST) or OFF (DOF)  
Press button 'B' to exit

### SETTING THE ALARM

Press button 'B' three times to view the ALARM  
Press button 'A' to enter setting mode.  
(--:--) shows alarm is off  
(7:30) shows alarm is on



Rotate finger around the outer edge of the screen to turn Alarm ON/OFF

With alarm 'ON' Press button 'B' to enter HOUR  
Rotate finger around the outer edge of the screen to adjust the digits up or down.  
Press button 'B' to enter MINUTES  
Rotate finger around the outer edge of the screen to adjust the digits up or down.  
Press button 'B' to exit

**NB**  
Please be aware of AM and PM indication lights

### SETTING THE WORLD TIME ZONE

Press button 'B' four times to view the 2nd CITY  
Press button 'A' to enter setting mode.



Rotate finger around the outer edge of the screen to scroll through cities.

Press button 'B' to enter DST  
Rotate finger around the outer edge of the screen to turn ON (DST) or OFF (DOF)  
Press button 'B' to exit

**NB**  
The world time feature has 27 preprogrammed selectable cities. Cities are abbreviated by 3 characters.  
ie. LON is London, NYC is New York City

### SETTING THE TEXT MESSAGE

Press button 'B' five times to view the TEXT  
Press button 'A' to enter setting mode.



Rotate finger around the outer edge of the screen to scroll through letters numbers and symbols.

Press button 'B' to confirm and move to next digit  
Rotate finger around the outer edge of the screen to scroll through letters, numbers and symbols.  
Continue sequence for maximum 10 characters  
Press button 'B' to exit

**NB**  
To put a space in the text use the " " symbol  
To save the text and exit use the "■" symbol.