


STORM

DEPTHINE

DISPLAY AND CROWN/BUTTON OPERATION

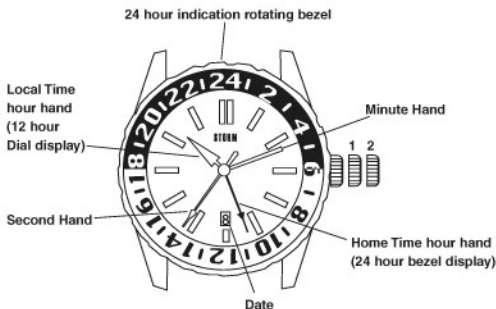

CROWN POSITION

- Position 1 Turn anticlockwise for date adjustment
Turn clockwise to set the hour hand to local time.
(Note: the hour hand moves separately to the minute hand)
- Position 2 Turn clockwise/ anticlockwise to set local time

FEATURES

LOCAL TIME / HOME TIME (DUAL TIME) / 24 HOUR INDICATION / DATE / 50 METERS WATER RESISTANT

- This watch features a unique dual-time operation for "Home" and "Local" times.
- The minute and second hands are the same under home and local time.
- The date is synchronised with local time.
- The home time hour hand is calibrated for a 24-hour time display as default.

HOW TO OPERATE

Ensure the number 24 on the bezel is at 12 o'clock by rotating the bezel.

A: Setting the Home time (24 hour bezel display)

(Setting at the hour provides a more accurate time setting.)

- Pull crown to the second position.
- Turn crown clockwise/ anticlockwise to bring the Home Time hour hand and minute hand to the desired home time hour on the 24 hour bezel display.

Note: If the dual time feature is not being used, calibrate the Home Time hour hand to show the 24 hour indication on the bezel display, for example 2:00pm (local time 12 hour display) equals to 14.00 on 24 hour bezel display.

B: Setting the Local Time (12 Dial hour display)

(Setting at the hour provides a more accurate time setting.)

- Pull crown to first position.
- Turn crown clockwise to advance hour hand. (The local time hour hand, will quick-advance 30 minutes independently.)
- Set hour hand to the correct local time hour.

Note: Setting the local time hour hand to a position other than an exact hour position may prevent the correct time from being displayed.

If the local time hour hand begins to fall behind the minute hand, pull the crown out to first position and turn clockwise to adjust the hour hand position.

When adjusting the minute hand, first turn the hand about 10 minutes past the desired time and then back to the designated position to ensure firm adjustment of the watch movement.

C: Setting the Date

- Pull crown to first position.
- Turn crown anticlockwise to adjust date.

Note: Do not set date between 9:00pm and 1:00am. This may affect the calendar function and may not show the correct date the next day.

