

STORM

LONDON

DIGIMEC
INSTRUCTIONS

BATTERY REPLACEMENT

This watch features an easy open case back for DIY battery changing. Use a suitable size coin and place it in the slot on the case back. Turn in the direction indicated to either open or close.

Please make sure the case back is closed securely for water resistance. Once the back is opened, water resistance can not be guaranteed unless it is sealed and tested by a professional or at our service centre.

Battery type: 1 x CR2032 (3V)

Note: Battery life will depend on usage.



03-14

STORM

DIGIMEC

DISPLAY DETAILS


Animation/Time/Date

W/R 50M

AM - White LED

DATE - Blue LED

YEAR - Green LED

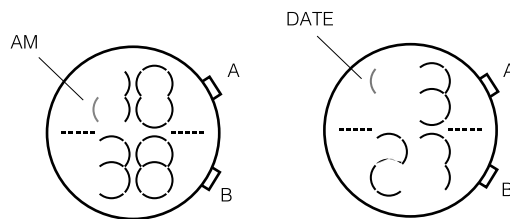

TIME: 10:38 AM

DATE: 27TH MARCH

0 1 2 3 4 5 6 7 8 9

0 1 2 3 4 5 6 7 8 9

READING THE TIME/DATE

Press button A once to view the time.

Press button A while time is displayed to view the date.

SETTING THE TIME & DATE

(Pull out the guard which covers button B)

Press button A to view the time.

While time is displayed, press button B so that the HOUR flashes, you are now in setting mode:

HOUR - MINUTE - YEAR - MONTH - DATE.

While the desired setting mode is flashing, press button A repeatedly to advance digits. (press and hold for continuous advance)

Press button B to set and move to next sequence, repeat for all setting modes.

When LED display switches off, all setting is automatically saved.

Note: Check the AM indicator is displayed for correct time.

Note: If the blue LED is on, date is displayed.