



- M** Mode
- A** Adjust
- S** Start/Stop
- C** Analogue crown

#### FEATURES

Time, Digital dual time, Date, Alarm, Hourly chime, Stopwatch, Timer, Automatic end of month correction, 12 / 24 hour selection.

#### SETTING DAILY ALARM (BOTTOM DIGITAL DISPLAY)

- Press M once to enter the alarm mode and display alarm set time.
- Press S to turn the alarm on / off. This will be indicated by the word *OFF* or the set time and a sound symbol at the top right of the top digital display when on.
- Press A to enter alarm time setting mode and advance hours and then minutes. One unit advances with every push of S. AM/PM will

be indicated by A or P at the top right of the display if in 12 hour mode.

- Press M five times to return to normal time keeping mode, or if left display will automatically return to display alarm set time after approximately 1 minute, and date display after 2 minutes.

#### STOPWATCH MODE (BOTTOM DIGITAL DISPLAY)

- Press M twice to enter stopwatch mode.
- Press S to start stopwatch. STRW will flash at the top of the display.
- Press A to record split time. SPL will flash at the top of the display to indicate that the stopwatch is still running. This can be used as many times as required.
- Press S again to stop stopwatch.
- Press A to reset stopwatch to 0.
- Press M three times to revert to date display.

#### TIMER MODE (BOTTOM DIGITAL DISPLAY)

- Press M three times to display countdown time in timer mode.
- Press S to start countdown. Countdown time is displayed on the right of the display.
- Press A to reset to the countdown time and continue.
- Press S again to stop the timer.
- To set the timer countdown time, press and hold A until the number on the right flashes. With every further press of A the countdown

timer will decrease by one hour.

- Press M twice to revert to date display.

#### SETTING TIME (TOP DIGITAL DISPLAY) AND CALENDAR (BOTTOM DISPLAY)

- Press A for 3 seconds to enter the time setting mode. (top display)
- Press A to select minutes and then hours; one unit advances with every push of S.
- Press A again to select month, date, day of week, and 12 / 24 hour (bottom display); one unit advances with every push of S.
- At any time, press M to return to normal display.

#### SETTING DUAL TIME (BOTTOM DIGITAL DISPLAY)

- Press M four times to enter dual time mode (bottom display).
- Press A for 3 seconds to enter the time setting mode. (top display)
- Press A to select minutes and then hours; one unit advances with every push of S.
- Press A to end time setting, then press M to return to date display.

#### CHIME FUNCTION

- Hold S and press A to turn the chime function on / off. This will be indicated by a bell symbol at the top right of the top digital display.

#### SETTING ANALOGUE TIME

- Pull out crown and turn anticlockwise to set hours and minutes.

# STORM

DIGITHON