



- M** Mode
- A** Adjust/Reset
- S** Start/Stop
- C** Analogue crown

#### GALAXY FEATURES

- Quartz analogue time, digital time, 12 / 24 hour clock, date, day of the week, stopwatch, timer, alarm, hourly chime.
- Press A to display month, date and day of the week.
- Press A again to return to normal time display.
- Pull out crown and turn anticlockwise to set analogue time.

#### CHIME FUNCTION

- Hold S and press A to turn the chime function on / off. CHI-ON is indicated at the top right of the display. This also tests the alarm/chime sound.

#### SETTING TIME AND CALENDAR

- Press and hold S for 2 seconds to enter time and calendar setting mode. Seconds will flash.
- Press A to reset seconds to 0.
- Press S to select minutes, hours, month, date, day of week and 12/24 hour clock; one unit advances with every push of A, or holding down A activates the fast advance function.
- When in 12 hour clock, AM or PM will be indicated below the seconds on the display.
- Press R at any time to return to normal time keeping mode, or display will automatically return if left for 1 minute.
- Note that alarm time will be specified as AM/PM or 24 hour as indicated in time setting mode.

#### SETTING ALARM

- Galaxy has two alarm set times, displayed by pressing M once to display alarm set time 1 (AL-1 on the mode indicator) or twice to display alarm set time 2 (AL-2 on the mode indicator). If an alarm is not set the word *OFF* is displayed instead of the set time.
- When in AL-1 or AL-2, press and hold S for 2 seconds to set hours. One hour advances with every push of A. AM/PM is indicated at the bottom right of the display.
- Press S to set minutes. One minute advances with every push of A.
- Press M to return to normal time keeping mode.
- To turn alarm off, press A while the alarm set time is displayed. The

set time will be replaced by the word *OFF*.

- When sounding, the alarm can be stopped by pressing any button.

#### STOPWATCH MODE

- Press M three times to enter stopwatch mode. STW is shown on the mode indicator. Press S to start stopwatch.
  - Press A to record split time. SPLIT will flash at the top right of the display, and second animator will run to indicate that the stopwatch is still running. This can be used as many times as required.
  - Press S again to stop stopwatch. Press A to reset stopwatch to 0.
  - Press M twice to revert to normal time display.
- Stopwatch displays minutes, seconds, 1/10 and 1/100 second up to 1 hour, and exceeding 1 hour, displays hours, minutes, seconds and 1/10 second. The second animator displays 1/10 seconds.

#### TIMER MODE

- Press M four times to enter timer mode. Mode indicator shows TMR.
- Press S to start countdown. Start time is shown on the right.
- While running, press A to reset to countdown time and continue.
- When the countdown reaches 0, the alarm will sound continuously for 10 seconds, while beginning to count upwards.
- Press S to stop the timer at any time.
- Press A to reset. The countdown time will flash. With every further press of A the countdown timer can be decreased by one minute.
- Press M to revert to normal time.

# STORM

GALAXY