



Dual Time / 50M water resistant

Crown A  
 Main time  
 Second disc  
 Dual time hour disc  
 Crown B

Pull out crown A and turn to set the main time.  
 Pull out crown B and turn to set the dual time hour.  
 The hour is indicated by the markers on the left for 3 to 12,  
 and on the right for 1 and 2 o'clock.  
 Note: The Second disc at the bottom cannot be set.

Please ensure both crowns are pushed back for water resistance.

### HOW TO READ THE DUAL TIME HOUR DISCS

Note: The dual time hour disc gives an indication of the hour only and not the minute. For dual time the minute will be the same as the main time on the left.

1 o'clock   2 o'clock   3 o'clock   4 o'clock   5 o'clock   6 o'clock  
 7 o'clock   8 o'clock   9 o'clock   10 o'clock   11 o'clock   12 o'clock