


## BUTTONS

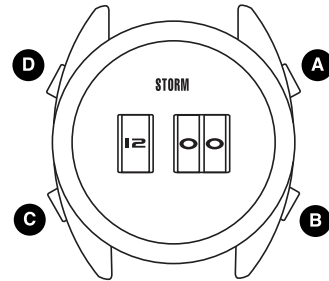

## BATTERY

Battery type: LR1130 x 2  
Battery life will depend on the usage.



04/18

# STORM

## KOMBI

## FRONT

### SETTING PROCEDURE – PLEASE COMPLETE FIRST

The watch must be set to 12:00 accurately before setting the time.

Press and hold Button D for 2 seconds, the drums of the watch will begin to move.

Press Button C to advance the **hour** drum to 12.

Press Button B to advance the **first digit** of the minute drum to 0.

Press Button A to advance the **second digit** of the minute drum to 0.

**Note: Press and hold button for quick advance, press Button D to confirm the watch is set at 12:00, the drums will spin fully once and confirm the watch has been set at 12:00.**

### SETTING THE TIME

To set the time, press Button C and hold for 2 seconds. The hour digit will begin to move.

Press Button C to advance the **hour**.

Press Button B to advance to the **first minute** digit.

Press Button A to advance to the **second minute** digit.

**Note: Press and hold button for quick advance.**

Press Button D to confirm the set time. Alternatively after setting the time, wait 15 seconds and the time will automatically confirm.

**Note: The digits may not line up accurately and may need to be reset.**

### ACTIVATING ANIMATION MODE

Animation Mode is designed to demonstrate, for display purposes the rotating drum of the watch.

Press Button A or Button B, all drums of the watch will move in animation mode for 20 seconds. After 20 seconds the watch will go back into Time Mode.

**Note: Battery life will depend on the usage.**

### SLEEP MODE (To conserve battery life)

Press Button B 3 times, the digits of the watch will move to 12:00.

The watch is now in Sleep Mode and will not move from 12:00, the IC will still be counting the time.

Press any button and the watch will deactivate Sleep Mode and return to the correct time.

## BACK