



How to set the time and day of the week
Pull the crown out to the 2nd click position when the second hand is at the 12 o'clock position.
Turn the crown clockwise to advance the hour and minute hand until the day hand is set to the correct day of the week. Then set the correct time taking AM/PM into consideration. Push the crown back to the normal position.

How to set the date
Pull the crown out to the 1st click position and turn the crown clockwise to set the date. When the date is set, push the crown back to normal position.

How to set the dual time
Press button A to advance the time by 15 minutes.
Press button B to decrease the time by 15 minutes.

Note:
For higher accuracy, when setting the minute hand, advance it 5 minutes ahead of the desired time and then turn back to the correct time.
Do not set the date and the day hands between 9:00pm and 4:00am otherwise, they may not move properly.
It is necessary to adjust the date on the first day after a 30 day month and February.
Position of the small dials may vary on some models.
The 24 hour hand moves automatically with the hour hand.
The day hand only moves forwards. The day hand moves to the next day between 2:00-4:00 am.