



FEATURES

Analogue time
 Dual time (hour display only)
 Date
 Torch

SETTING THE MAIN TIME

Pull the winder (A) out to position 2.

Turn winder to set the hour and minute to the correct time.

NB: hour hand is on the main dial while the minute is shown on the disc in the centre of the dial.

Push the Winder back to position 0 to activate movement.

NB: Turn the hands through a 24H cycle to determine whether setting the time in AM or PM. Date will change after 12AM.

SETTING THE DATE

Pull the winder (A) out to position 1.

Turn winder anti-clockwise to set the date.

Push the Winder back to position 0 to activate movement.

NB: Please avoid setting the date between the hours of 9PM and 3AM, as the date may not change correctly and cause damage.

TORCH FEATURE

- The Torch light can be activated by pressing the button (C) on the Left hand side. The light has a 5 second time delay after which it automatically switches off.
- Battery life is dependant on usage.