


Note:
For higher accuracy, when setting the minute hand, advance it 5 minutes ahead of the desired time and then turn back to the correct time.
Do not set the date and the day hands between 9:00pm and 4:00am otherwise, they may not move properly.
It is necessary to adjust the date on the first day after a 30 day month and February.
Position of the small dials may vary on some models. The 24 hour hand moves automatically with the hour hand.
The day hand only moves forwards. The day hand moves to the next day between 2:00-4:00 am.



08.15

STORM

MULTIFUNCTION MODELS

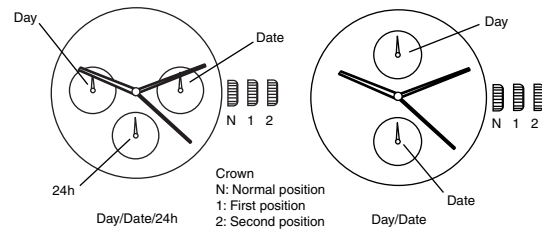


How to set the time and day of the week

Pull the crown out to the 2nd click position when the second hand is at the 12 o'clock position.
Turn the crown clockwise to advance the hour and minute hand until the day hand is set to the correct day of the week. Then set the correct time taking AM/PM into consideration. Push the crown back to the normal position.

How to set the date

Pull the crown out to the 1st click position and turn the crown anti-clockwise to set the date hand. When the date is set, push the crown back to normal position.

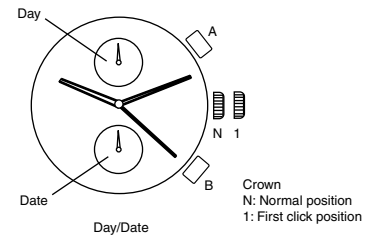

Pull the crown out to the 1st click position when the second hand is at the 12 o'clock position.
Turn crown to set the time, taking AM/PM into consideration.
Push the crown back to normal position.

How to set Day/Date

Press button A to advance the day hand.
Press button B to advance the date hand.