
STORM

FEATURES

Analogue Time / Digital Time, (hour, min, sec) Day / Date / Year
(Automatic end of month correction, including leap year)

12-24 hour selection / Countdown & Count up (date, hour, minute, second - range 1st Jan 1997 to 31st Dec 2099) / Alarm / Stopwatch / Split Time Function / Chime / Compass / Thermometer / 50 Water Resistant

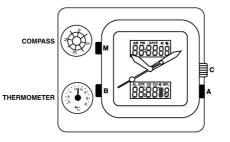

A) SETTING THE DIGITAL DISPLAY

Using the Mode Function

Press the (M) Mode button to select the different Mode features.

(Keep pressing (M) until correct Mode appears)

The Mode sequence is as follows:

Time / Calendar - Count Down or Count Up timer - Alarm - Stopwatch

1. Setting the Digital Time/ Calendar

(While in the Time/Calendar Mode)

Press + Hold (B) button for 2 sec to enter setting mode (sec will flash)

Press (A) to re-set sec to 00. (Top display)

Press (B) button (each time) to select Minutes (min will flash) and then Hour:

While in the desired selection (selection will flash) Press (A) to advance the digits one unit with each press.

Press (B) (each time) to select Month, Date, Day, Year, 12-24 Hour (bottom display) While in the desired selection (selection will flash)

Press (A) to advance the digits one unit with each press.

OBLIGATOR