

BATTERY REPLACEMENT

This watch features an easy open case back for DIY battery changing. Use a suitable size coin and place it in the slot on the case back. Turn in the direction indicated to either open or close.

Please make sure the case back is closed securely for water resistance. Once the back is opened, water resistance can not be guaranteed unless it is sealed and tested by a professional or at our service centre.

Battery type: 1 x CR2032 (3V)

Note: Battery life will depend on usage.



10-12

STORM

SOLAR

DISPLAY DETAILS

Inner LED's represent hours or month


Outer LED's represent minutes or date

4 square LED's represent 1 minute or 1 day each.

(one light means 1 minute or 1 day)

PM - Green circle LED

DATE - Blue circle LED

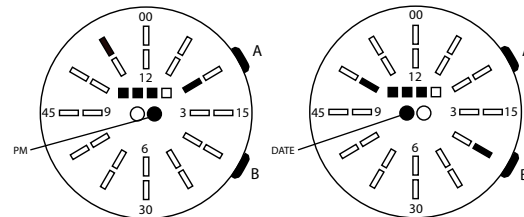

TIME: 2:53 PM

DATE: OCT 23RD

READING THE TIME/DATE

Press button A once to view the time.

Press button A twice to view the date.

SETTING THE TIME & DATE

(Pull out the guard which covers button B)

Press button A to view the time.

While time is displayed, press and hold the button B for 4 seconds until HOUR flashes, you are now in setting mode.

While digits are flashing, press B to select the setting mode: HOUR - MINUTE - MONTH - DATE.

While the desired setting mode is flashing, press button A repeatedly to advance digits.

Press button B to set and move to next sequence, repeat for all setting modes.

When LED display switches off, all setting is automatically saved.

Note: Check the PM indicator is displayed for correct time.

Note: If the blue circle LED is on, date is displayed.