


INSTRUCTIONS FOR USE

- To set time, pull crown out to second click and turn clockwise to set correct time.
- To set the date, pull out crown to first click and turn clockwise to set one digit and anti-clockwise to set the other.
- **IMPORTANT:** Please do not adjust the date between 23.00 and 3.00, as this will influence the unique date driving wheels and cause possible damage.
- When the date reaches the end of the month, ie. the 31st, the watch must be manually re-set to the 1st of the month, this will allow correct date change to occur.

Please note that the unique 2 digit date feature allows the date to reach 39. If it is not manually re-set end of the month, the first digit goes up to 3 and the second up to 9, and so it is possible to see 39. Please turn the crown slowly when setting the date and allow the date disc to turn fully so that the digits can be seen clearly.

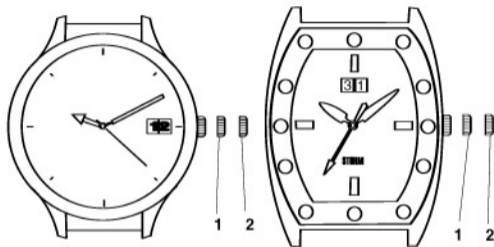

CROWN OPERATION

- Position 1 turn crown clockwise or anti-clockwise to set the date
- Position 2 turn crown to set the time