


## DISPLAY

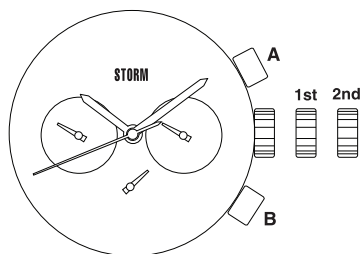

## SETTING THE TIME & DATE

1. Pull the crown out to the 1st click position when the seconds hand is at the 12 o'clock position.

2. Turn the crown to set hour and minute hands (take AM/PM into consideration).

The 24 hour hand moves correspondingly with the hour hand. When setting the hour hand, check that the 24 hour hand is set correctly. When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

3. Push the crown back to normal position.

**Day correction:** Press button A to advance day.

**Date correction:** Press button B to advance date.

Do not set the date and the day hands between 9:00pm and 4:00am, otherwise they may not change properly.



10/18

# STORM

LONDON

**TYSON**

FRONT