


# STORM

LONDON


VENDE

## FEATURES

- Dot Matrix display
- Analogue time
- Day & Date
- World Time with 24 Time zones.
- Electro luminescent dial light

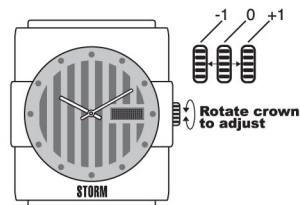

## SETTING SEQUENCE

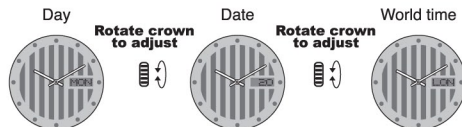

## SETTING THE ANALOGUE DISPLAY

Make sure that the country you are setting the time for is displayed in the small window. See - Setting the World Timer.  
Pull out the crown and turn clock wise until the correct time is showing. Press the crown back to starting position.

## SETTING THE TIME, DAY & DATE



With Day or Date showing in the small display window, press and hold the crown for 4 seconds. Display shows hours flashing.



Turn the crown in either direction to increase or decrease the hour. Press the crown to confirm and enter minute mode. Minutes flashing.



Turn the crown in either direction to increase or decrease the minute. Press the crown to confirm. Continue as above through entire sequence as follows: Year, Month, Date and Day.



Press crown to exit.

NB

If the day and date changes at 12 noon, pull the winder out and advance the time 12 hours.

## USING THE LIGHT

Press the crown once and release.  
Light stays on for 4 seconds and automatically turns off.



## TIME ZONES CHART

1.	SAM	SAMOA	1:00
2.	HNL	HONOLULU	2:00
3.	ANC	ANCHORAGE	3:00
4.	LAX	LOS ANGELES	4:00
5.	DEN	DENVER	5:00
6.	CHI	CHICAGO	6:00
7.	NYC	NEW YORK	7:00
8.	CCS	CARACAS	8:00
9.	RIO	RIO DE JANEIRO	9:00
10.	REC	RECIFE	10:00
11.	AZO	AZORES	11:00
12.	LON	LONDON	12:00
13.	PAR	PARIS	13:00
14.	CAI	CAIRO	14:00
15.	MCW	MOSCOW	15:00
16.	DXB	DUBAI	16:00
17.	KHI	KARACHI	17:00
18.	DAC	DACCA/DHAKA	18:00
19.	BKK	BANGKOK	19:00
20.	HKG	HONG KONG	20:00
21.	TYO	TOKYO	21:00
22.	SYD	SYDNEY	22:00
23.	NOU	NOUMEA	23:00
24.	WLG	WELLINGTON	24:00

## SETTING THE TIME ZONE

Turn the crown until in World Time Mode. Country code is displayed. Press crown in and hold for 4 seconds. Country code is flashing. Turn the crown in either direction to scroll through the country code list. See Time Zones chart.

When desired country is selected press the crown to confirm. Analogue hands automatically adjust the time. Do not worry if the time is not correct.

Daylight Saving Time is flashing on the display. DST  
Turn crown to select YES or NO corresponding to the chosen country. Press the crown to confirm. Hands automatically adjust 1hr if required. Pull out the crown and set the analogue time to the correct time corresponding to the chosen country. The watch is now set.

## USING THE WORLD TIMER

Turn the crown until in World Time Mode. Country code is displayed. Press crown in and hold for 4 seconds. Country code is flashing. Turn the crown in either direction to scroll through the country code list. See Time zones chart.

When desired country is selected press the crown to confirm. Analogue hands automatically adjust to the time in chosen country. Daylight Saving Time is flashing on the display. DST  
Turn crown to select YES or NO corresponding to the chosen country. Press the crown to confirm. Hands automatically adjust 1hr if required.