

# STORM

LONDON

DIGIPLEX INSTRUCTIONS



04-11

### COUNT DOWN AND TIMER FUNCTIONS

3 count down timer can be set at the same time, While in countdown timer mode, press C key to select T1 to T3. The maximum count down for each is: T1=90 Minutes, T2=24 hours, T3=1825 days. To set each countdown timer, Press and hold D key for 3 seconds, press B key to decrease digits and C key to advance digits. Press D key to move to the next sequence (T2/T3 only). Press and hold D key for 3 seconds to exit. Then Press D key again to start or pause the count-down timer. Once the count down time is completed, 3 beep alarm will sound. The timer cycle can be started again by pressing D to start or to pause.

NOTE: T2: Shows time remaining to the set count down time.  
T3: Shows number of days, hours, minutes, seconds remaining to the set count date.

### STOPWATCH FUNCTION

In stopwatch mode, Press C key to alternate from Split time (SPL) or Lap time (LAP). Press D key to start, and then again to pause the stopwatch, this can be repeated many times. While in pause, Press C key to reset to zero.

To view Split or Lap time, Press C key while stopwatch is counting. The Split or Lap time will be shown on top of the screen, while the stopwatch will continue to count on the middle of the screen. The Split or Lap time operation can be repeated many times.

### BACKLIGHT

Press A key at any mode to operate the backlight. Press and hold for continuous light.

**Battery life will depend on usage of backlight and alarm.**

# STORM


DIGIPLEX

### FEATURES



- LCD Display, Hour, Minute, Second, Month, Date, Day, Year(2000-2069)
- Dual Time
- 5 Alarms
- Chime on every hour.
- 3 count down timers
- Summer time.
- Stopwatch (SPL / LAP)
- 12 / 24H format,
- Auto Calendar
- 1/100 second Chronograph
- Key tone
- EL backlight
- Water resistant 50 Meters

### OPERATIONAL MANUAL

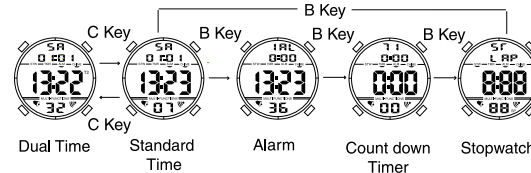

### TIME SETTING

In standard time mode, press and hold D key for 3 seconds. The "second" will flash, Press C key to reset the second. Press D key to select next sequence as follows: "Minute", "Hour", "Year", "Month", "Date", press B key to decrease digits and C key to advance digits while each sequence item is flashing. While adjusting the hour, select the correct 12/24 hour format. "H" on bottom of the screen means 24 format selected, "A" or "P" means 12 hour format AM/ PM selected.

Press and hold D key for 3 seconds to exit and return to standard time mode.

### ALARM AND CHIME SETTING

In the alarm mode, Press and hold D key for 3 seconds, "AL" will flash. Press C key to turn Alarm or Chime on/off. ("AL") will display when alarm is on) or Chime ("CH") will display when chime is on). No symbol displayed means both alarm and Chime is off. Press D key to select "hour" or "minute" for setting, press B key to decrease digits and, C key to advance digits while each sequence item is flashing. Press and hold D key for 3 seconds to exit.

### ALARMS

5 alarms can be set at the same time within a 24 hour period. While in the Alarm mode, Press C key to select from Alarm 1AL to 5AL. The alarm setting is same as above, ringing will be 23 seconds for each Alarm.

Note: Please ensure the alarm symbol is displayed for each alarm, in order to activate it. To turn off the alarm sound, press either B/C/or D key. If the Alarm symbol is left on for each alarm, it will be active daily until symbol is removed.

### SUMMER TIME SETTING

In time setting mode when "minute" is flashing, press and hold D key for 3 seconds entering summer time setting mode. Press C key to switch summer time On/Off, then press D key to return to setting. Press and hold D key for 3 seconds to exit and return to standard mode.  
NOTE: When summer time is ON, standard time will auto increase one hour at 2.00AM on the last Sunday in March and decrease one hour at 2.00AM on the last Sunday in Oct.

### DUAL TIME SETTING

In standard time mode, press C key to view the Dual time, ("T2" will show at the right-hand side of the LCD), To set the hour press and hold D key for 3 seconds, the "hour" will flash, then press B key to decrease digits and, C key to advance digits.) Press and hold D key for 3 seconds to return to Dual time. Note: the minute and other settings cannot be changed on the Dual time. Press C Key to return to normal time.